


PD-5 SERIES

China's Best Quality Hand-Held Distance Meter



Distance measurement

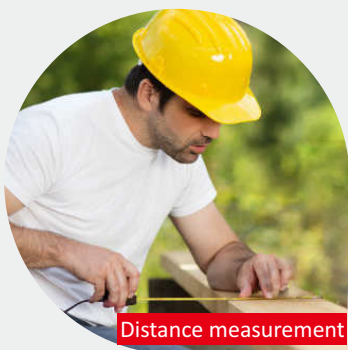

Indoor decoration



Furniture installation



Engineering surveying



Mechanical engineering



Firefighting / traffic



Planning industry



Warehouse logistics

Excellent configuration, highest accuracy

- ◆ Ceramic-plastic package receiving tube can greatly improve the laser quality of receiving and reduce circuit board crosstalk, which endow product with stable signal and long service life.
- ◆ The world's leading production technology of copper laser tubes: high speed, 1.5mm precision, Long distance, low heat, fast heat dissipation and strong anti-interference.
- ◆ PD56/58/520 is also equipped with a bottom extension. Hall sensor can be used to measure from the Corner of the wall and improve the accuracy of plane measurement.

Intelligent measuring device, higher efficiency

- ◆ Simple and easy to operate. The one-key measurement is very user-friendly.
- ◆ Electronic level meter and tilt sensor can help users to find horizontal direction.
- ◆ PD56/58/520 allow user to store and review distance, area, volume data in internal memory.

Excellent performance in various environment

- ◆ PC+ABS material makes the case stronger and the rubber ring protective layer makes it broken-resistant, shatter-proof, with good hand feeling.
- ◆ Measurement can be performed both indoor and outdoor.
- ◆ The leybus aspheric lens of PD series can withstand extreme temperature without deformation. Storage temperature range from -25°C to +70°C, the working temperature range from -10°C to +50°C.
- ◆ Display screen with backlight, suitable for bright and dark environment, also good for night work.
- ◆ Drop resistance is 1.0 meter.

Advanced design

- ◆ Handy and portable, suitable for professional builder
- ◆ Measurement range from 30m to 200m optional





Features of 4 models

- ◆ PD53N: with the simplest function and convenient operation, suitable for simple measurement such as home inspection/ building acceptance inspection.
- ◆ PD56N: Time-delay measurement and double Pythagoras are available
- ◆ PD58N: Distance stake-out and dip-angle measurement. Stores up to 99 units of data.
- ◆ PD520N: Bluetooth function, Graphs-aided function. Lithium batteries, longer working hours, more eco-friendly. The ideal choice for high-precision construction measurement and other professional works.



SPECIFICATIONS

	PD-53N	PD-56N	PD-58N	PD-520N
Measuring Range	0.1-30m	0.05-60m	0.05-80m	0.05-200m/120m with/without reflector plate
Measuring precision (typical)	$\pm 1.5\text{mm}$			
Laser Class	620-690nm, <1mW			
Laser Type	II			
Type	indoor	indoor	Outdoor	Outdoor
Selectable Datum Side	●	●	●	●
Display Illumination	●	●	●	●
Buzzer	●	●	●	●
Single/ Continuous Measurement	●	●	●	●
Area Measurement	●	●	●	●
Volume Measurement	●	●	●	●
Single Pythagoras	●	●	●	●
Double Pythagoras	○	●	●	●
Plus/minus Calculation	○	●	●	●
Measuring Extended Edge	○	●	●	●
Time Delay Measurement	○	●	●	●
Dip Angle Measurement	○	○	●	●
Distance Stake-out	○	○	●	●
Data Storage	○	20	99	99
With Target Reflection Plate	○	○	○	○
Metope Measurement	○	○	○	●
Measuring With Tripod	○	○	○	●
Triangle Area	○	○	○	●
Trapezoidal Measurement	○	○	○	●
Graphics Auxiliary Targeting	○	○	○	CMOS imaging sensor
Display Unit	Two lines stroke segment	Three lines stroke segment		2.2" color screen
Unit Conversion	m/ft	m/ft/inch		
Key	three keys	seven keys	nine keys	twelve keys
Battery	2x1.5V AAA battery			Rechargeable lithium battery
Battery Life	5000 times			20000 times
Size (mm)	112x38x24	122x45x26		137x52x29

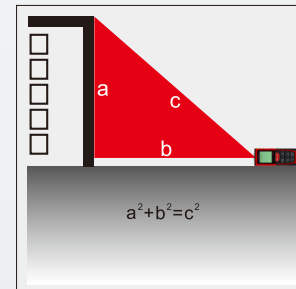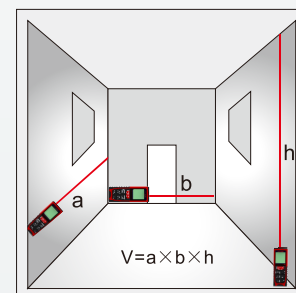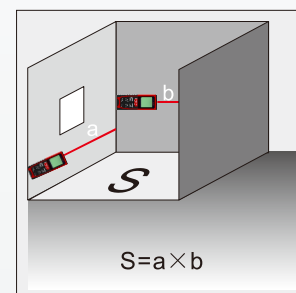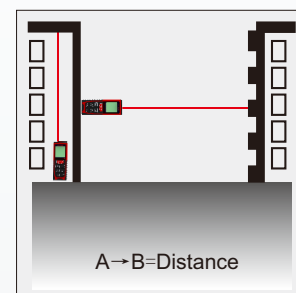

Professional's Choice

GUANGDONG KOLIDA INSTRUMENT CO., LTD.

Add: 7/F, South Geo-information Industrial Park, No.39 Si Cheng Road, Tian He IBD, Guangzhou 510663, China

Tel: +86-20-22139033 Fax: +86-20-22139032

Email: export@kolidainstrument.com http://www.kolidainstrument.com